


Here are the connections for a “FET-less” electret capsule such as the JLI-2555BXZ3-GP.


The center terminal goes to “SGNL”.

Capsule Ground is connected to “GND”.

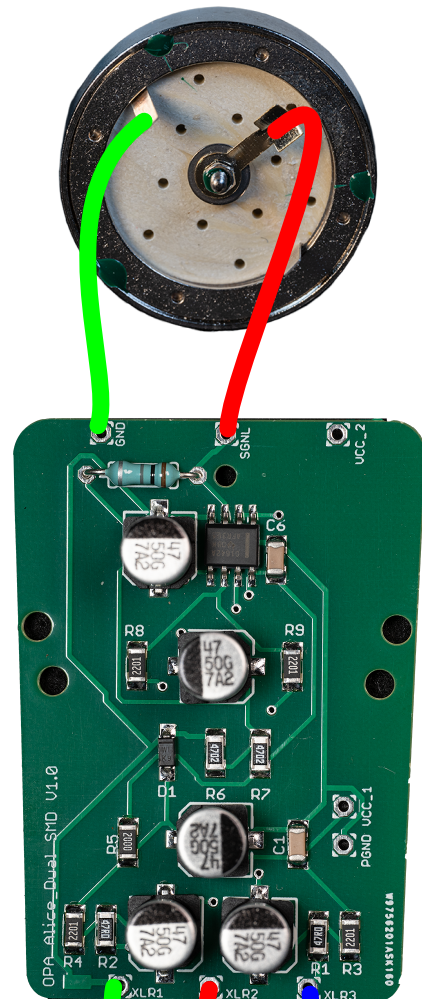

XLR Pin 1, 2, and 3, to “XLR1”, “XLR2”, “XLR3” on the PCB.

Connect two 22nF capacitors between Pins 2 and 3 of the XLR and Ground. This should be as close the XLR jack as possible for best EMI/RF suppression. Connect Pin 1 to the Ground Lug.

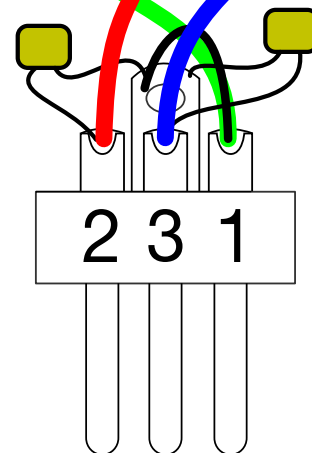

NOTE: Pay attention to XLR Pin Numbers. They are printed on most connectors. Look Closely