


Here are the connections for a “FET-less” electret capsule such as the TSB2555B.

The center terminal goes to “SGNL”.

Capsule Ground is connected to “GND”.

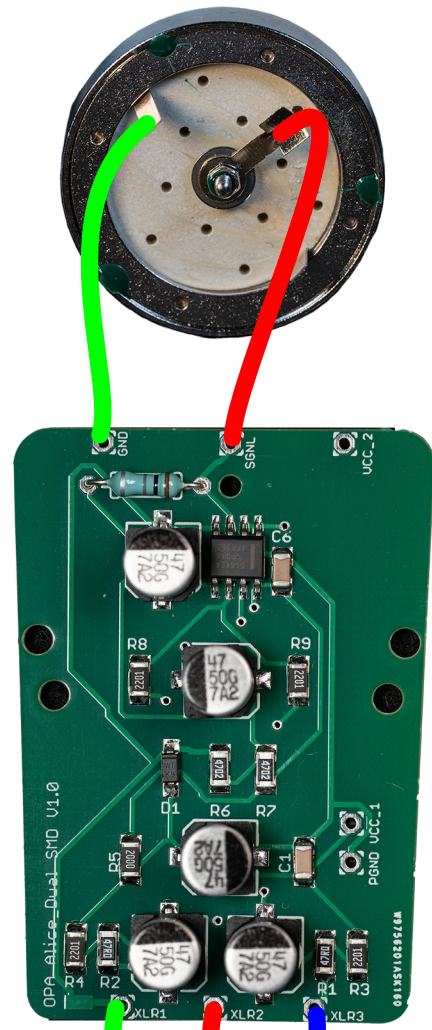

XLR Pin 1, 2, and 3, to “XLR1”,
“XLR2”, “XLR3” on the PCB.

Connect two 22nF capacitors between
Pins 2 and 3 of the XLR and Ground.
This should be as close the XLR jack
as possible for best EMI/RF
suppression. Connect Pin 1 to the
Ground Lug.

